



FOS PAR 7x10W ALU

User Manual



This manual contains important information.
Please read before operating fixture.

1. SECURITY TIPS

WARNING!!! To reduce the risk of fire, electric shock, or injury to persons, follow these important safety instructions:

- non-professionals, not to disassemble the light arbitrarily and lighting accessories inside.
- rated voltage range: AC110V-120V/60Hz or AC200V-240V / 50HZ (to be selected).
- not beam irradiate the flammable materials, flammable materials and the lamp should be maintained at least 1M over the distance.
- lamps used in ambient temperature: -15 °C -40 °C, the highest temperature of the surface of the lamp: 60 °C.
- to keep away from the liquid substance and humid environment.
- before using the lights must ensure the good grounding, can not install charging and remove any parts.
- the installation of lamps, must be fixed screw fasteners with additional security cable and regular inspection.
- lamps consecutive working hours is not recommended more than 10 hours.
- should stop using the lights in time when happens unusual conditions during the process.
- lamp parts of the rotation, external accessories and paste parts should be regular inspected, such as the emergence of loose and rock, should be reinforced in a timely manner to prevent the accident.
- lamps adopt strong winds to refrigerate, it is easy to accumulate the dust, so you must clean it weekly especially the cooling air opening, otherwise the dust will plug leading to poor light.

2 TECHNOLOGY REFERENCE

Power supply: AC90~240V / 50~60Hz

Power consumption:70W

Led:7pcs×10W RGBW LED 4in1 Beam angle:15° 25° 40° optional

DMX channels:4 CHS / 8 CHS

Control mode: DMX, Auto, Sound, Master-slave, strobe, dimmer


Housing Material: Iron + Aluminium Protection: IP20

Working Environment: -20~40°C

Packing size: 22.5×10×22.5Cm (1pc/CTN) 49×34×51Cm (12pcs/CTN)

N.W.: 1.8Kg G.W.: 24Kg(12pcs/CTN)

3 Board Instruction

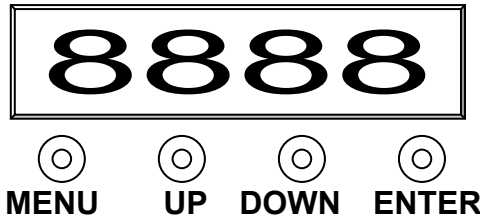

1~Press MENU Can circulate 9 different functions. The front 2Digits mean the function it has. (Please see the function form as follow.) And the last 2Digits mean the function's address, speed or parameter. Press UP or DOWN can change the value. And press ENTER to confirm.

2~Press MENU more than 2sec. The 2Digit number will flash. Then press UP or DOWN can change the value quickly. Then press the ENTER to save the value you want. If you don't want to save the value, press MENU more than 2sec. is okay.

Operate Menu

No.	Display	Value	Description
-----	---------	-------	-------------

1	A001	001- 512	DMX mode,8 Channels
2	d001	001- 512	DMX mode,4 Channels
3	r255	000 - 255	Dimming red from dark to brightness
4	G255	000 - 255	Dimming green from dark to brightness
5	b255	000 - 255	Dimming blue from dark to brightness
6	u255	000 - 255	Dimming white from dark to brightness
7	F255	005 - 255	Strobe from slow to fast
8	CC15	00 - 15	Jump mode from slow to fast
9	DE15	00 - 15	Fade mode from slow to fast
10	CP15	00 - 15	Pulse mode from slow to fast
11	Soud	/	Sound active

4 DMX CHANNEL SHEET

4 Channels mode

CH	Value	Function
CH1	0-255	Dimming Red
CH2	0-255	Dimming green
CH3	0-255	Dimming blue
CH4	0-255	Dimming white

8 Channels mode

CH	Value	Function	Description
----	-------	----------	-------------

CH1	0-255	Master dimming	Master dimming
CH2	0-255	Dimming Red	Dimming static color
CH3	0-255	Dimming green	
CH4	0-255	Dimming blue	
CH5	0-255	Dimming white	
CH6	0-255	Strobe mode	
CH7	0-50	No function	No function
	51-100	Static color	Static color selected by CH8
	101-150	Jump mode	Macro mode
	151-200	Fade mode	
	201-250	Pulse mode	
	251-255	Sound mode	Sound mode
CH8	0-255	Speed adjustment	Speed for Marco function
	0-31	Red	CH=51~100
	32-63	Green	
	64-95	Blue	
	96-127	White	
	128-159	Red+Green	
	160-191	Red+Blue	
	192-223	Green+Blue	
	224-255	Full on	

5 FIXED EQUIPMENT

Please fasten the fixture clamp before hanging. The clamp can be fasten by the little hole in the middle of the bracket, then tie with a safety belt. The loading capacity of the safety belt should be 10 times than the weight of the fixture itself.

6 CONNECTION OF DMX-512 AND CONNETION WITH THE LIGHT EQUIPMENT

Please connect XLR-XLR control wire with every light from the output of DMX.

XLR connection :

DMX-OUTPUT




Pin 1: Screen
Pin 2: Signal -
Pin 3: Signal +

DMX-INTPUT



Pin 1: Screen
Pin 2: Signal -
Pin 3: Signal +

ATTENTION: Please do remember to connect one circle circuit plug on the output signal of last equipment. And this circle circuit plug was connected a 120ohm resistance between terminals 2 and 3 of the CANON plug, connect this circle circuit plug can avoid the signal flash phenomena of signal DMX512 during the transmission.

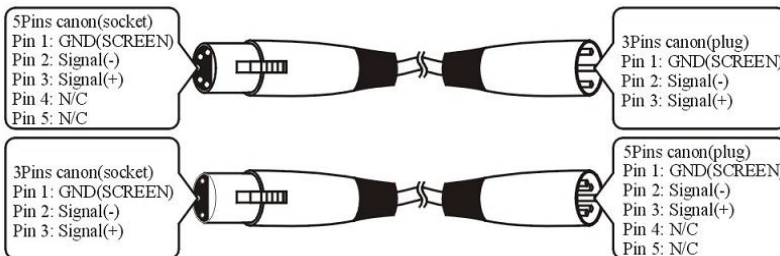

7 Maintenance

Problems	Check list	Trouble Shooting
The fixture do	1. If your power as same as the input	1. Make sure the voltage.

not work	of the machine. 2. If the fuse was broken.	2. Replace the same fuse.
LED dimmed	If your power us same as the input of the machine	Make sure the voltage input.
No DMX input	1. If the polarity is opposited in the DMX controller. 2. If it is in DMX mode. 3. If there are 2 Master in a loop.	1. Correct the DMX polarity. 2. Change to the DMX mode. 3. Set one piece into Slave mode.
Par Light Set works abnormality	1. Check if the serial is correct on the Par Light display	1. Set the right serial No on the single Par Light

8 AFTER SERVICE

1. Our company offer technical consultation to customers for ever.
2. If the machine is wrong and need repairmen, please truthfully fill in the related content and feedback us the problems timely, as well as we must improve the product.
3. In addition to the lamp, also matching accessories are as follows:
accessories: Power line 1 piece **Optional parts:** (customers)

Warranty Card

Name	Model	Production	Purchase
------	-------	------------	----------

End User
Company Name:
Add:

Sale Store
Link man:
Tel: Stamp

Description: These must be truthfully fill, seal by the end-user and point-of-sale, or else the warranty will not work (warranty period and terms, see the following)

warranty period: one year since purchase warranty terms: 1、 If fail when using the product in normal state, you can made under the provisions of the warranty, show the warranty card and purchase bills(copy), and enjoy free maintenance service in a specific service center or the manufacturer.

2. The following will be the implementation of paid service:

- (1)Without the effective warranty card
- (2)There's blank, alter and no point-of-sale name
- (3)Fail caused by unresistance
- (4)Fail caused by transportation or unloading
- (5)Fail caused by not operate by manual
- (6)Fail caused by disassemble without unauthorized
- (7)Fail caused by using the unauthorized control system

Note:

Based on our company continue to improve the product, the statement containing data may have changed, and will not notice the change anymore. Company retains its right to change specifications related when product is improved. Thanks for your understanding.